




Keep Up Counter

HOW TO USE THE COUNTER

The Keep Up Counter uses an internal sensor that measures impacts and converts them to a score.


- 1 Press the "reset" button, the counter display will show "000".
- 2 Hit the ball and the counter will start. A "beep" sound will be emitted for every hit.
- 3 The sensor does not measure impacts closer than 0.5 seconds apart; this is adequate during normal keep up play.
- 4 To avoid 'cheating' the score locks automatically if the ball is left idle for 2.5 seconds. This prevents players picking up the ball and continuing play. It will not register any further hits until the reset button is pressed.
- 5 Press and hold "hi-score" button and the highest score will be displayed. Release the "hi-score" button and the display will return to the player's score. (whenever the "hi-score" button is pressed, the player's score will be locked).
- 6 Press the "reset" button to zero the score before the next play.
- 7 If the ball is inactive for 2 minutes the counter will automatically go to "sleep" mode.
- 8 A players score includes the bounces made as the ball hits the floor.
- 9 To register a score a positive impact must be made, so occasionally if the ball is hit too softly or not square on then a score may not register.

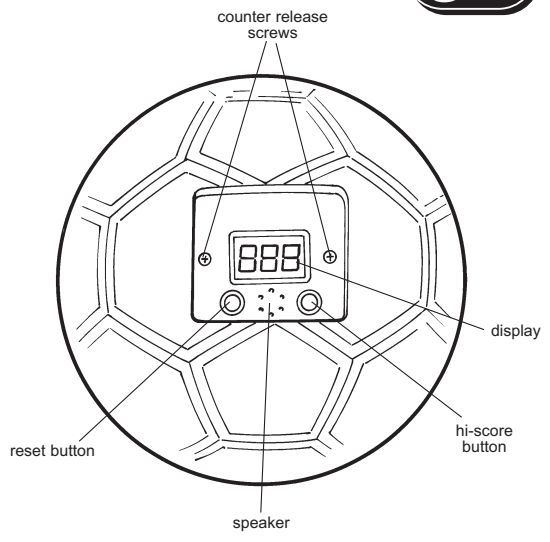

BATTERY REPLACEMENT

Unit uses two 1.5V LR44 batteries.
 Non-rechargeable batteries are not to be recharged.
 Rechargeable batteries are to be removed from the toy before being charged.
 Rechargeable batteries are only to be charged under adult supervision.
 Different types of batteries or new and used batteries are not to be mixed
 Only batteries of the same or equivalent type as recommended are to be used.
 Batteries are to be inserted with the correct polarity
 Exhausted batteries are to be removed from the toy.
 The supply terminals are not to be short-circuited.

- 1 Unscrew the two counter release screws on the front face of the counter.
- 2 Carefully remove the counter unit from the ball. To avoid splitting do not put any pressure on the foam edges.
- 3 Unscrew the two battery cover screws and remove the battery cover.
- 4 Replace the batteries ensuring they are inserted with the correct polarity.
- 5 Replace the battery cover and screw.
- 6 Press the power reset button.
- 7 Insert the counter unit back into the ball and screw into position.

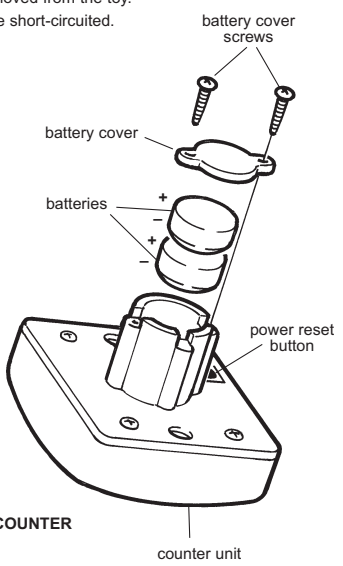

NOTE Do not overtighten the screws.

CARING FOR YOUR KEEP UP COUNTER

- Do not play in wet conditions.
- Do not leave outside.
- Do not leave the LCD in direct sunlight.
- Do not bounce on hard surfaces.
- The ball is counter-balanced and is not designed to be bounced on the floor or used as a match ball / normal football.

Not suitable for children under 3 due to small parts

Product No. M06049

Please retain this leaflet for reference to the manufacturer

Made in China to European Safety Standard



DISTRIBUTED BY



MV SPORTS & LEISURE LTD
 35 Tameside Drive • Castle Bromwich
 Birmingham • B35 7AG • UK

Email: info@mvsports.com www. mvsports.com

CUSTOMER HELPLINE

We make every effort to ensure that this product reaches you in satisfactory condition.

However if you have any queries, need assistance, or find this product defective, please call our Customer Helpline:

0870 8404255 (UK ONLY)