 


Kickmaster® Target Shot

CONTENTS:

- Tube no.1 & 2 (x4)
- Tube no.3 (x2)
- Tube no.4 (x2)
- Tube no.5 (x2)
- Tube no.6 (x2)
- Tube no.7 (x2)
- Tube no.8 (x2)
- 1 Target hook (x12)
- 2 Bolt (x4)
- 3 Washer (x4)
- 4 Wingnut (x4)
- 5 Elastic target ties (x6)
- 6 Net ties (x35)
- 7 Target
- 8 Net
- 9 Target peg (x6)
- 10 Frame peg (x16)

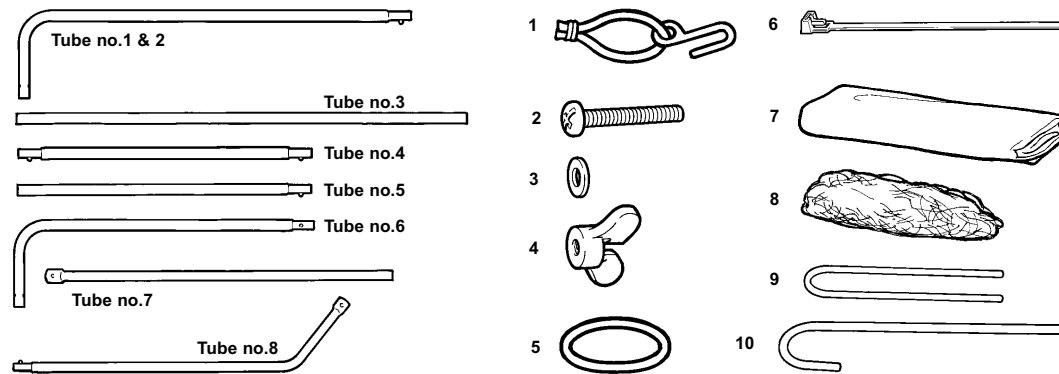

WARNINGS

To be assembled & dismantled by an adult.

To be used on a flat surface.

Check all wing nuts are firmly tight and the frame assembly is securely located before use.

Ensure frame is securely pegged to ground before use.

Do not leave outdoors in adverse weather conditions.

Do not climb or hang from cross bar.

Check regularly for wear and tear. discontinue use if any breakage is found. failure to do this may result in injury.

Keep away from fire.

Keep away from heat sources.

THIS PRODUCT IS NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS

Please retain this leaflet for reference to the manufacturer

Carefully made in China to European Safety Standard



DISTRIBUTED BY

 


MV SPORTS & LEISURE LTD
35 Tameside Drive • Castle Bromwich
Birmingham • B35 7AG • UK
Email: info@mvsports.com
www.mvsports.com

FRAME ASSEMBLY

Before assembling the frame it is necessary to slide the target hooks over the frame tubes. You will need to slide 6 target hooks over no.3 tube top tube and 3 target hooks over each no.4 side tubes.

Being careful to select the appropriately numbered tubes, assemble the frame as illustrated.

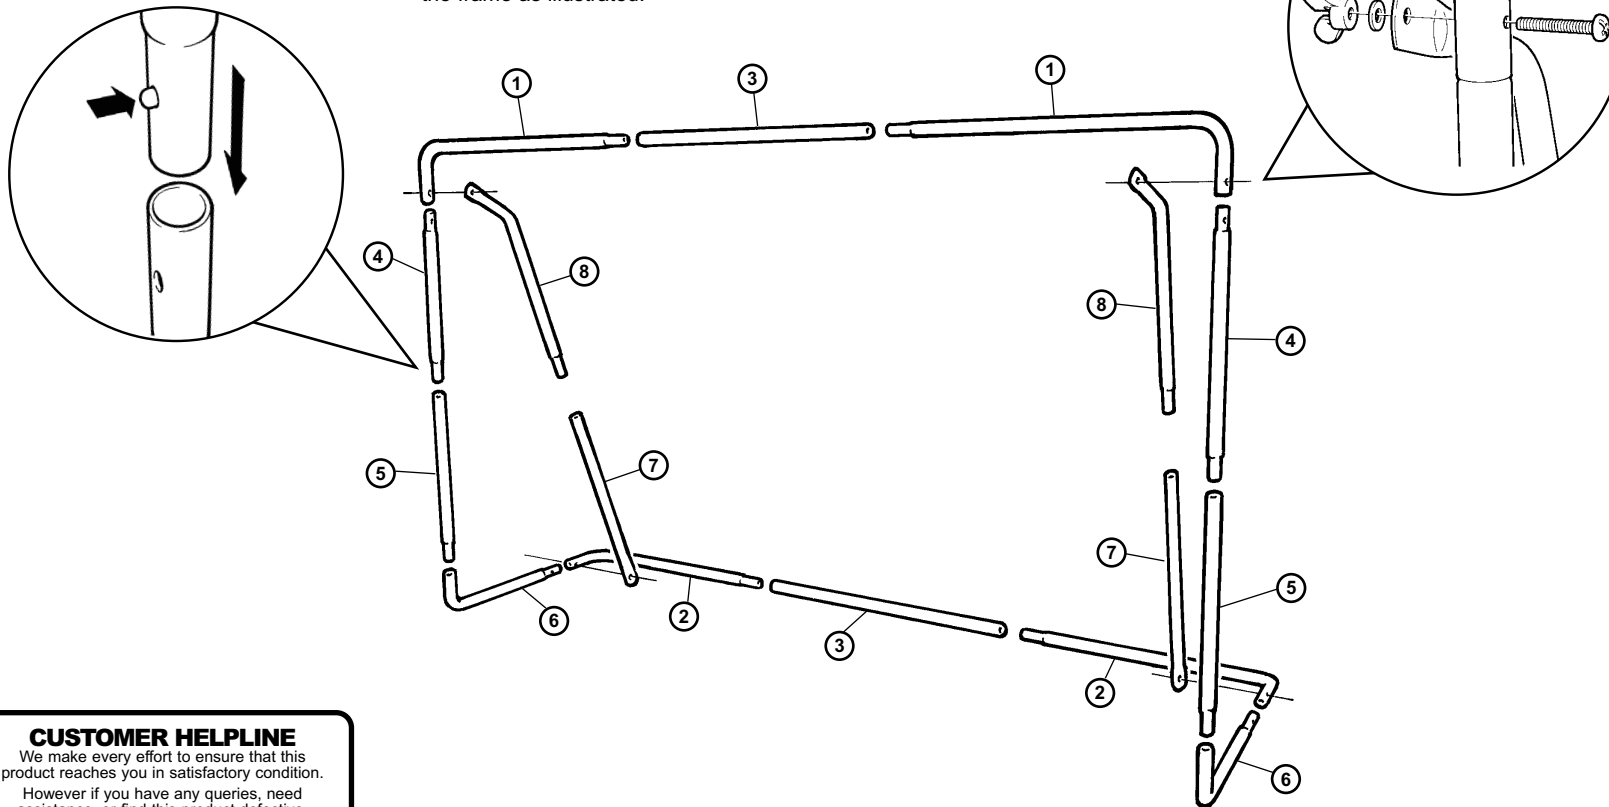


CUSTOMER HELPLINE

We make every effort to ensure that this product reaches you in satisfactory condition.

However if you have any queries, need assistance, or find this product defective, please call our Customer Helpline:

 0870 8404255 (UK ONLY)

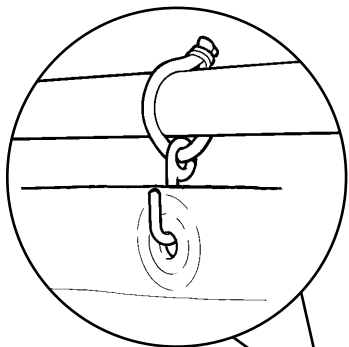

TARGET ASSEMBLY

Space out the target hooks to match the eyelets in the target. Hook the target into position.

 
 
 
 
 
NET ASSEMBLY

Spread net out, locate the two red tabs. Put the net over the frame with the red tabs in the top left and right hand corners of the frame. The seam of the net should follow the frame supports. Secure using net ties ensuring you space them out evenly over the whole frame.

SECURING THE FRAME AND TARGET

When the frame, target and net are assembled the target and frame need to be secured to the ground.

Position the target shot assembly in a suitable position (see warnings).

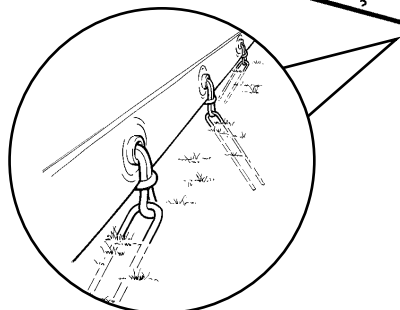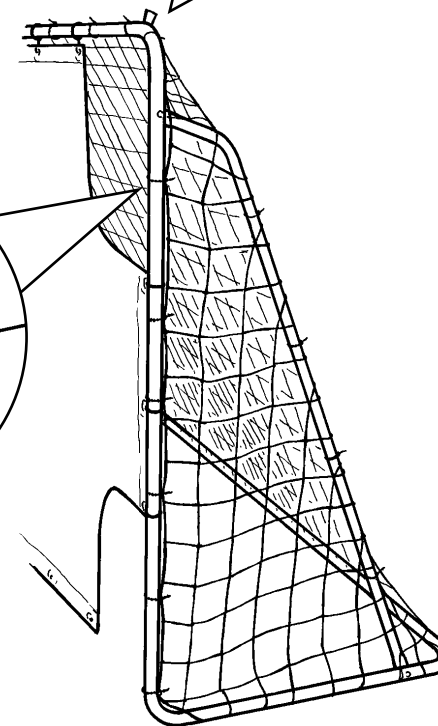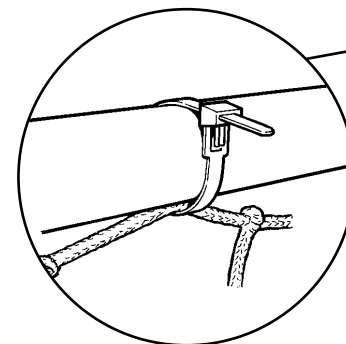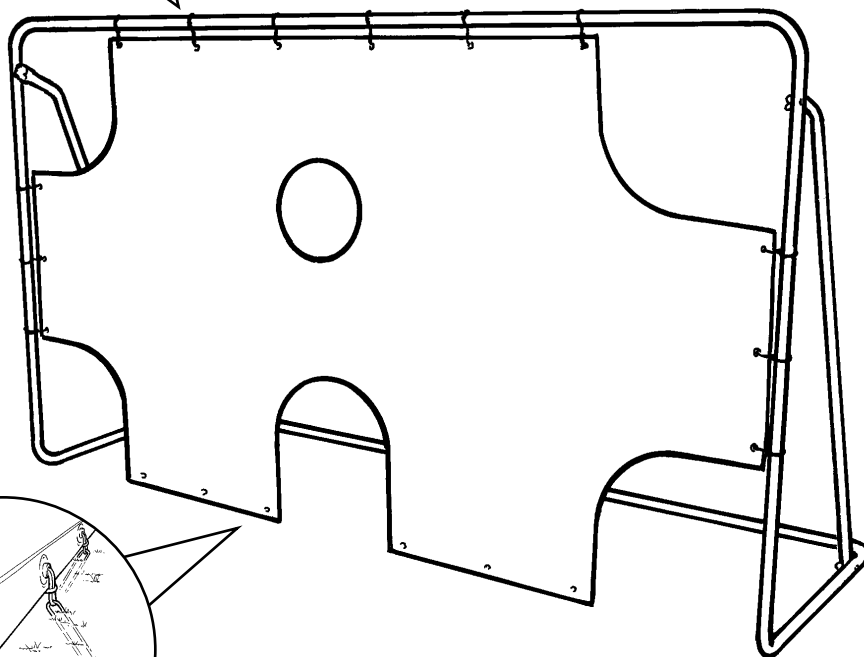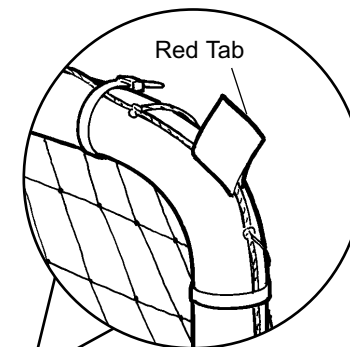

Securing Target

Fix the target to the ground by threading the elastic loops through the bottom eyelets and fasten to the ground with small pegs. Secure pegs using a mallet. Ensure the pegs are pushed fully into the ground at an angle, as illustrated.

 
 
Securing Frame

Fix the frame to the ground using 16 large pegs. Position around the frame base as illustrated.

NOTE: To secure frame firmly to ground always anchor two pegs together (as shown) at anchor points indicated. Secure pegs using a mallet.

CAUTION: Check regularly that pegs are secure. Loose pegs may cause injury.

Care should be taken when using a mallet as misuse may cause injury.

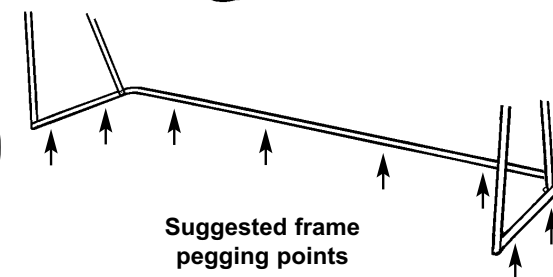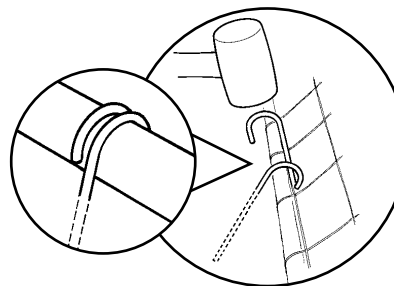

Suggested frame pegging points