



MO08636

TRITON MULTI-PLAY



FOR CHILDREN AGED 3 TO 10 YEARS

SAFETY GUIDELINES

WARNINGS

Only for domestic use. This product has not been designed for commercial use in play centres, nurseries etc.

Only suitable for outdoor use.

Not for children with a body weight over 45kg. Only one child per seat at any one time.

Not for children under 3 years due to small component which may cause choking hazard.

This equipment must be assembled and checked by an adult. Two adults may be required to assemble this product. Adult supervision is required at all times.

Before use please check all bolts are tight, secure and intact.

Check all coverings for bolts and sharp edges and replace when required.

Check swing seats, chain, ropes and other means of attachments relevant to your product for evidence of deterioration. Replace when required in accordance with the manufactures instructions if necessary.

Place the product on level surface at least 2 meters from any structure or obstruction such as a fence, garage, house wall, overhanging branches, laundry line or electrical wires.

The items MUST be anchored firmly into the ground.

DO NOT install the product over concrete, asphalt or any hard surface.

DO NOT orientate the product directly towards the sun.

Leave all fittings finger tight until assembly is complete, for ease of construction. Then tighten firmly.

Children should not wear cycle helmets whilst on this equipment.

Do not allow children to stand on any swing seats, glider seats or slide chutes relevant to your product.

Do not allow children to jump or climb off any moving equipment.

Do not twist ropes or wrap them over the top bar.

Do not allow loose, hooded or baggy clothes to be worn as children can get trapped and may be unable to free themselves.

Do not allow children to climb on parts of this equipment not intended for this purpose.

Do not allow children to wander into the play area whilst the equipment is in use.

Gliders and swings must not exceed an angle of 60 degrees from the ground.

Regularly check the item for wear and damage, removing the item from use when necessary until replacement parts are fitted.

Failure to assemble and maintain this item as per instruction may cause injury to the user.

Please keep the instructions in a safe place for future reference.

The minimum clearance between the swing seat and ground level should be 350mm.

Please contact our customer services department if you have any problems.

 
Inspect all parts of this product every 6 months following purchase. If any parts look worn or you find any problems, please contact us for replacements and do not use the product until problem has been corrected. Hedstrom recommends replacing the plastic swing rope clamps every 2 years even if there is no sign of deterioration.

Do not modify this item.

Conforms to EN71

Made in China to European Standard.





COMPONENT CONTENTS

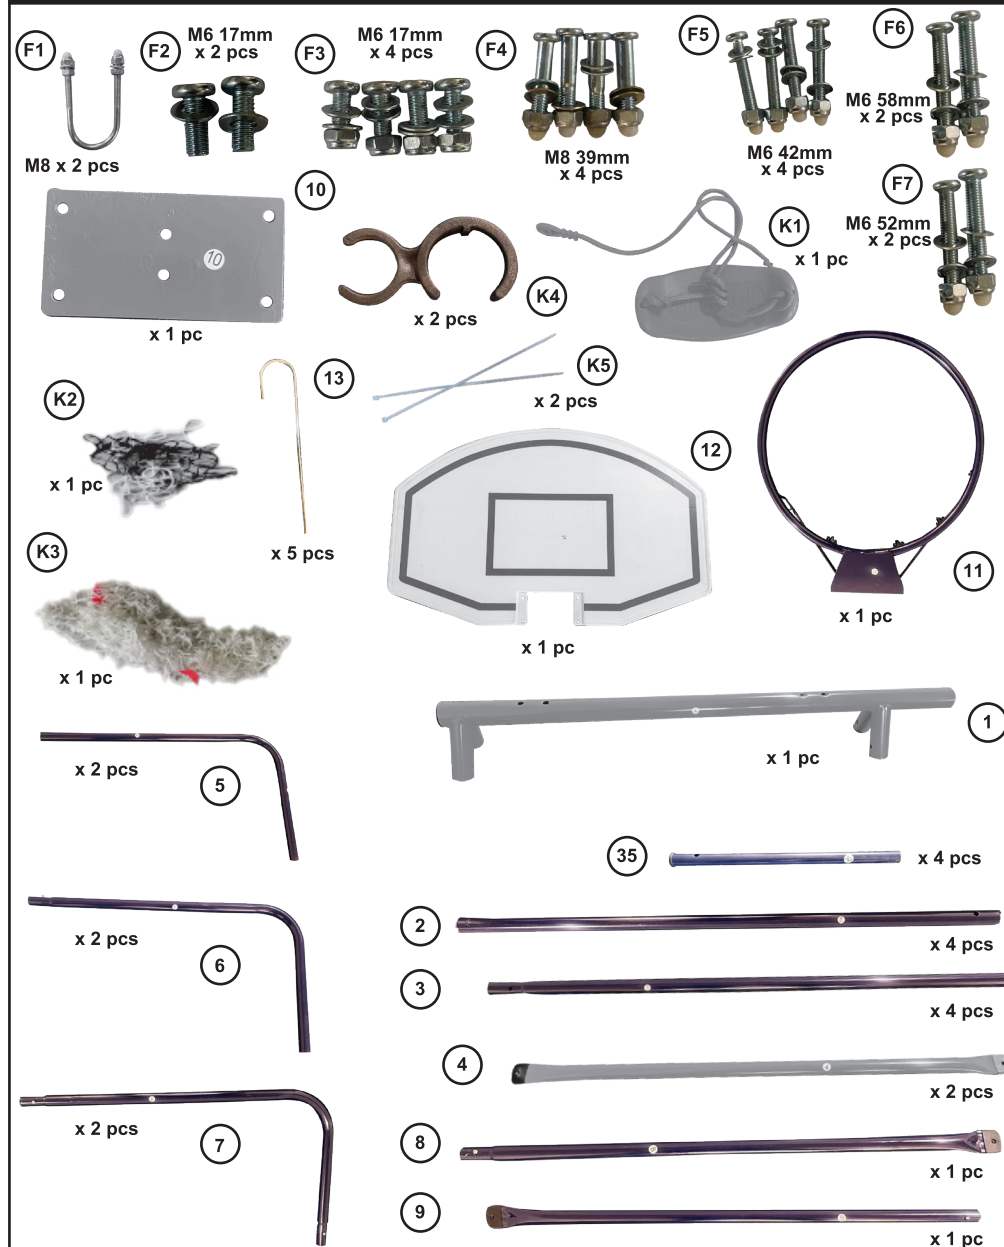

IMPORTANT: Make sure you read the safety notice on the front page and always supervise children while they are playing on the equipment. Once assembly is completed carefully check equipment. In the unlikely event that you do find any problems, please contact us. Do not allow children to use this product until the problem has been corrected.

STEP 1

   
 
Components:

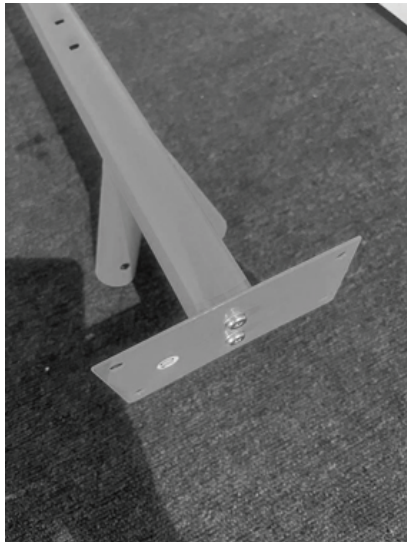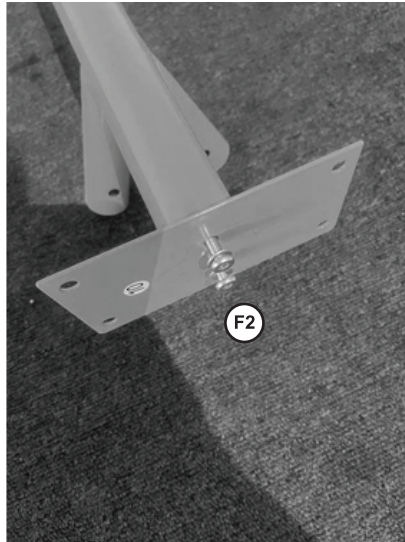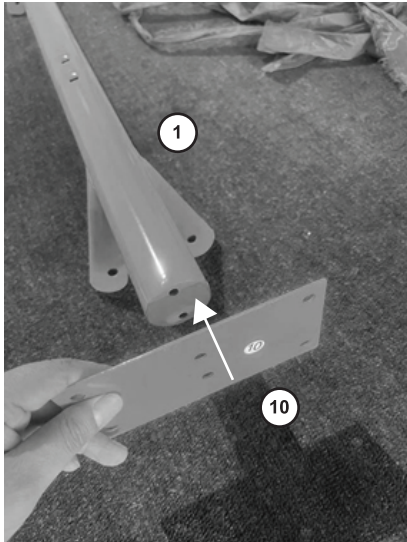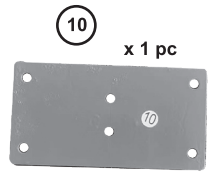

Attach faceplate (10) to top bar (1) and secure into position with F2 bolts.

STEP 2


 
 
Components:

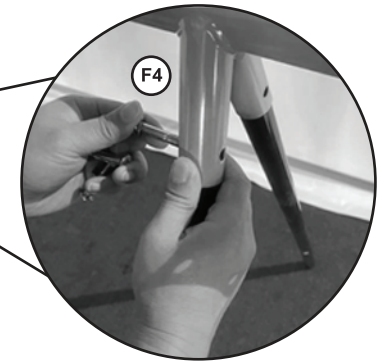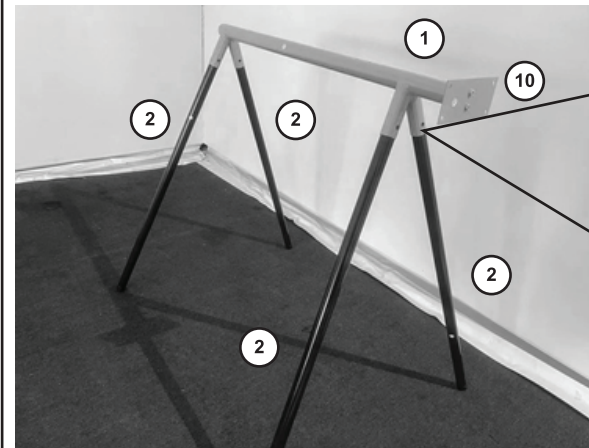

Slide top leg (2) into top bar (1) and secure with F4 bolts. Repeat for each top leg x 4.

STEP 3

   Components:

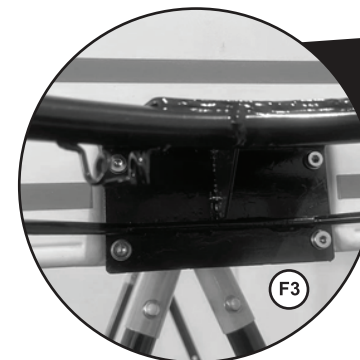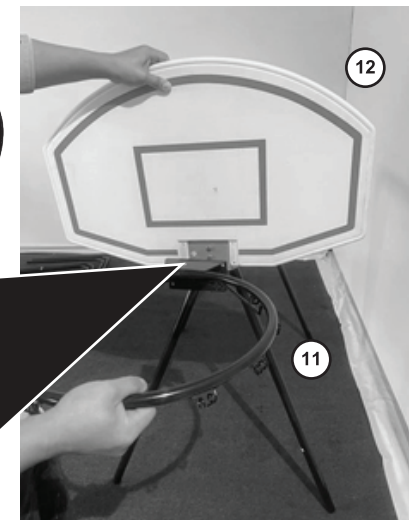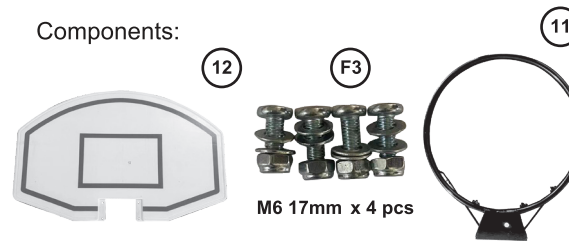

Connect backboard to faceplate (12) and attach basketball hoop (11) with F3 bolts to secure into place.

 
STEP 4

Components:

(K2)



x 1 pc

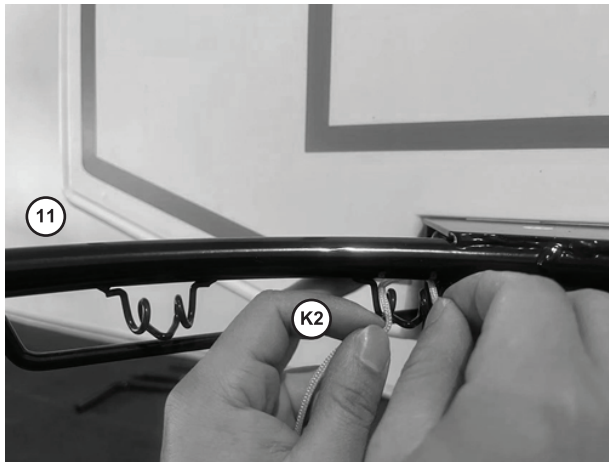

Hook basketball net (K2) onto the basketball hoop (11) clips making sure it is secure, repeat all way around edge of hoop to complete.

STEP 5

Components:



(3) x 4 pcs

 
(F5)



M6 42mm x 4 pcs



(4) x 2 pcs

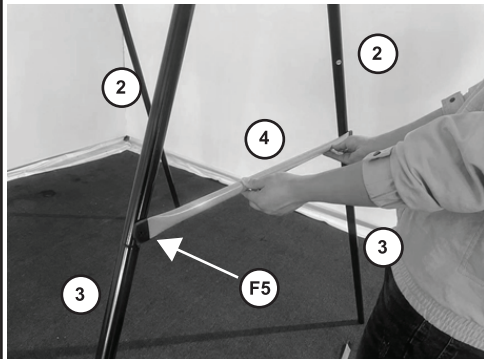

Take bottom legs (3) and insert into the top legs (2). Attach sidebar (4) onto outside of legs with F5 bolts. Repeat for other side.



Make sure structure of frame is secure and all bolts are tightened.

STEP 6

Components:

(8)



x 1 pc

(F6)



M6 58mm x 2 pcs

(F7)



M6 52mm x 2 pcs

(9)

 
 


x 1 pc

(35)



x 4 pcs

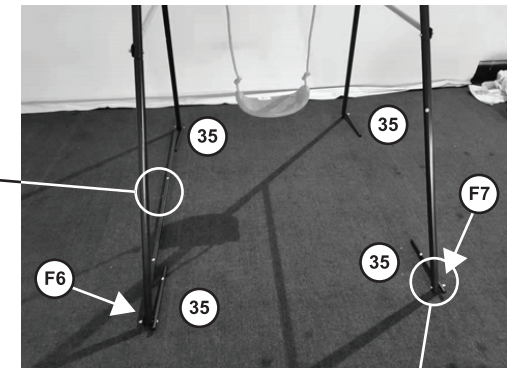
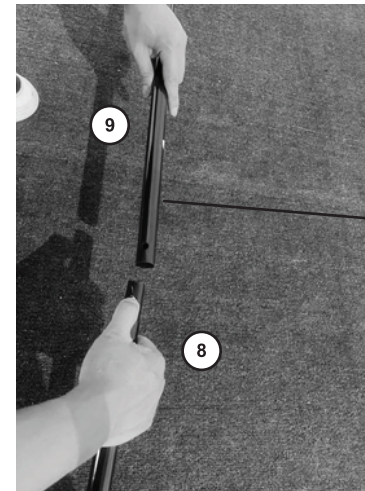


Assemble tube (8) and (9) together to form a bracket. Secure in place with ground pegs (35) x 2 either end and use F6 bolts to secure.

Attach the remaining ground pegs (35) to opposite side legs and secure with F7 bolts.


STEP 7

  Components:

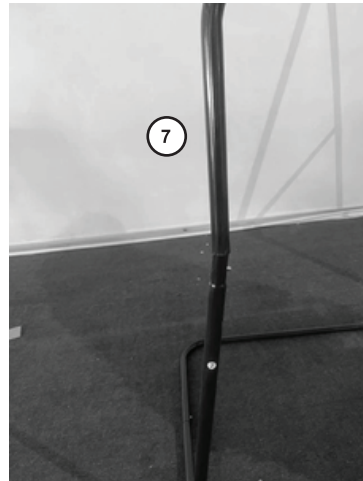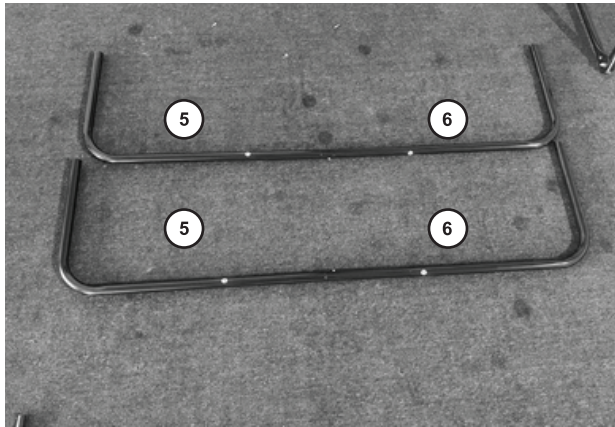

Assemble goal frame part (5) and (6) together and click into place. Repeat to form two pieces shown above.


 
Slot the two new parts in previous step into part (7) to form the complete goal frame.

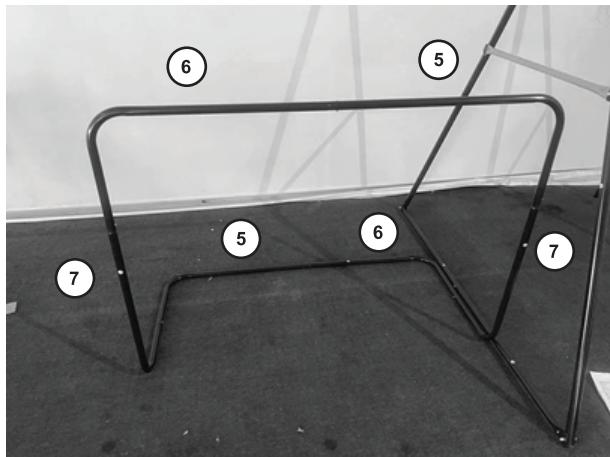


Goal frame should now look like the above.

STEP 8

  Components:

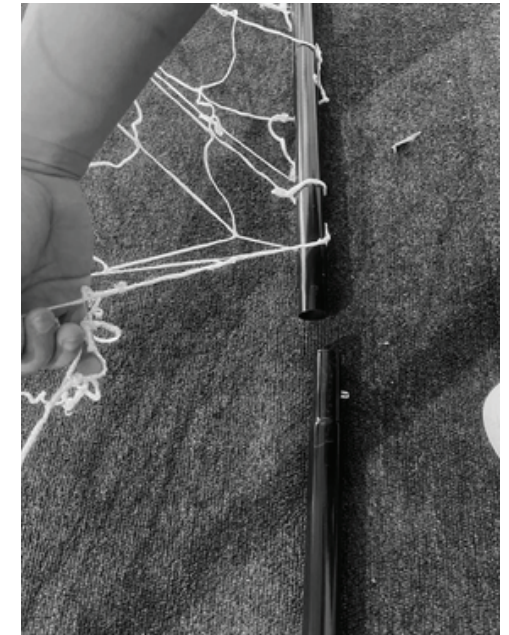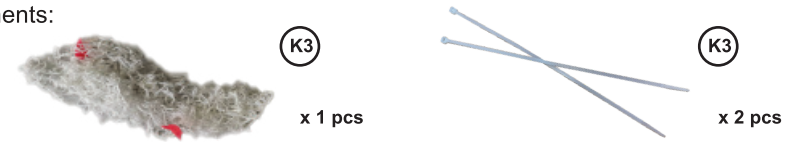

 
Thread the goal net (K3) around the frame tubes (5), (6) and (7). Ensure that the red marker tags on the net are affixed at the top left and right corners of the goal.

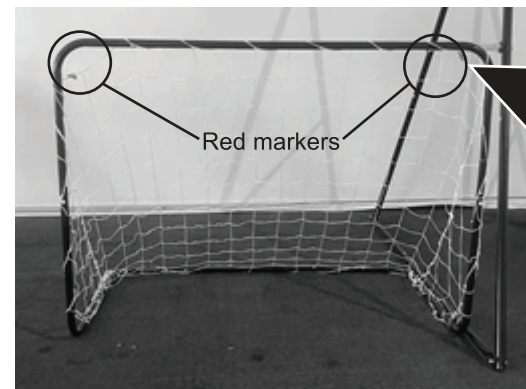


Tighten the top corners of the goal net to the frame with cable ties (K5).

STEP 9

 
Components:

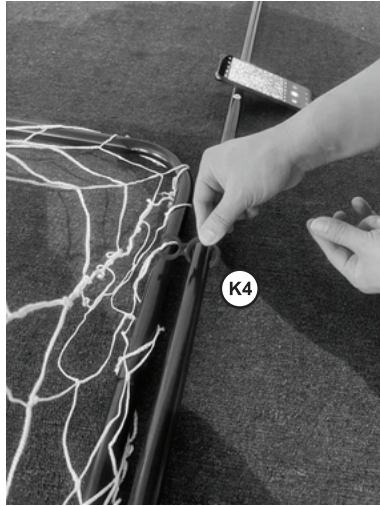

 Attach the goal frame to the main swing frame using plastic clips (K4).

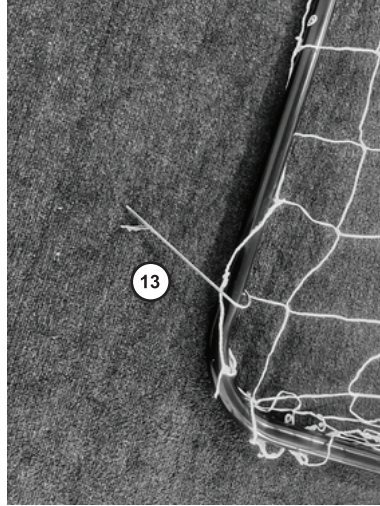


 Use the ground hooks (13) to anchor the goal into the ground.

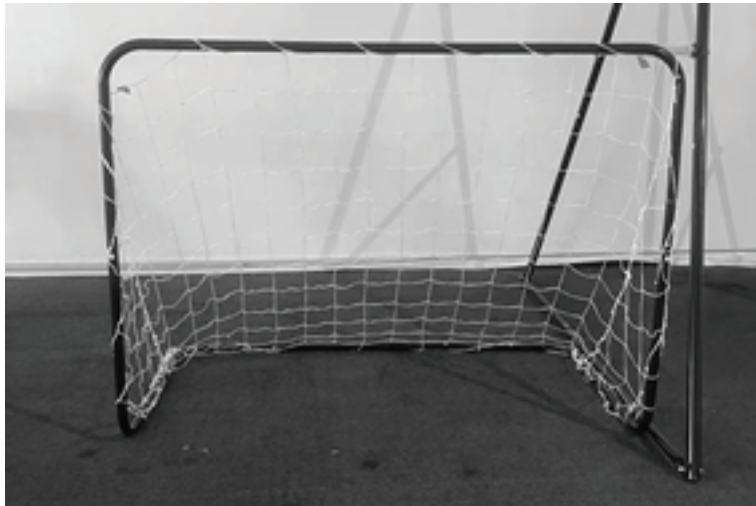


STEP 10

 Components:

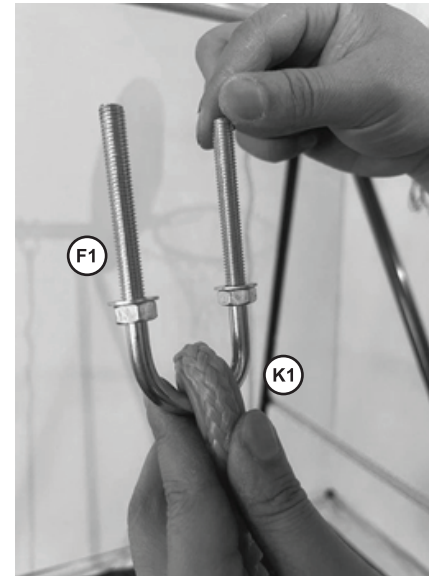

 Unscrew the nuts from the F1 bolt, thread the hoop end of the swing seat (K1) rope onto the (F1) bolt and replace nuts and washers as shown.



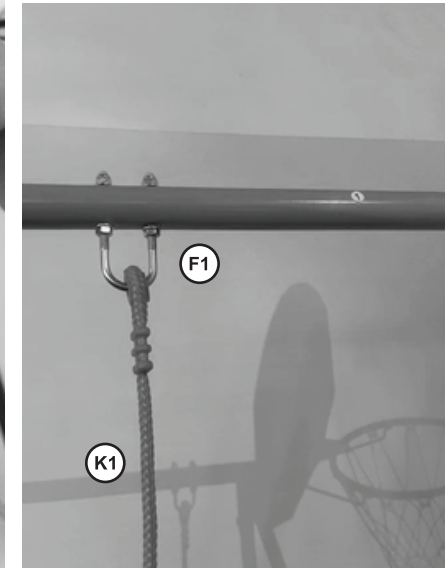


Slide the F1 bolt through the bolt holes on the top bar (1) and secure.

Repeat step 10 for other side.

Anchoring to the ground

   IMPORTANT: For safety reasons this product **MUST** be anchored and concreted into the ground. If you are uncertain about this procedure please phone the helpline number below.

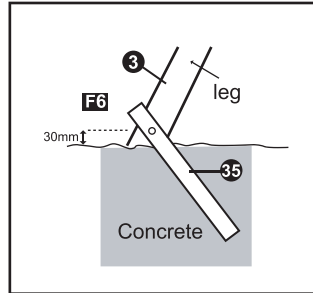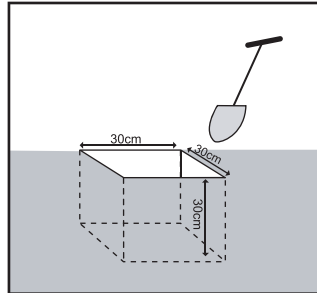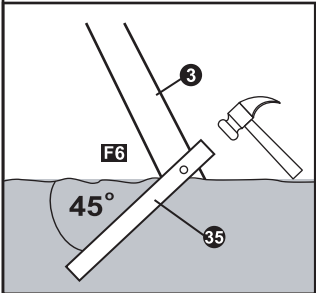

FULLY ASSEMBLED TRITON MULTI-PLAY



MV Sports & Leisure Ltd.
35 Tameside Drive
Castle Bromwich
Birmingham B35 7AG
United Kingdom
www.mvsports.com



CUSTOMER SERVICES

MV has taken great care to ensure that this item has reached you in good condition. Should you have a query, please contact customer.services@mvsports.com where your query will be dealt with promptly. Alternatively, you can call on 0121 748 8017.



This mark denotes compliance with the standards laid down by the E.C. (European Community)

It is in your best interest to keep a note of our name and address for future reference. If you have any complaints or find the product to be faulty, in order to avoid any delay, please contact the distributor at the address shown below.

Vulcan Consulting
EU Authorised Representative, The Merrion
Buildings - Eonic offices, 18-20 Merrion
Street, Dublin 2, D02 XH98, Ireland.