

2 IN 1 SWING M08835

SAFETY GUIDELINES

Warnings

Only for domestic use. This product has not been designed for commercial use in play centers, nurseries etc.

Only suitable for outdoor use.

Toddler swing For children 6 - 36 months. 20kg max

Junior swing For children 3 - 10 years. 45kg max

Only one child per seat at any one time.

The flat swing seat does not have a back or seat belt. It is not suitable for children under 3 years as they may not be able to balance themselves. For children under 3 years, please use the baby swing seat.

This equipment must be assembled and checked by an adult. Two adults may be required to assemble this product. Adult supervision is required at all times.

Before use please check all bolts are tight, secure and intact.

Check all coverings for bolts and sharp edges and replace when required.

Check swing seats, chain, ropes and other means of attachments relevant to your product for evidence of deterioration. Replace when required in accordance with the manufacturers instructions if necessary.

Place the product on level surface at least 2 metres from any structure or obstruction such as a fence, garage, house, wall, overhanging branches, laundry line or electrical wires.

The items MUST be anchored firmly into the ground.

DO NOT install the product over concrete, asphalt or any hard surface.

DO NOT orientate the product directly towards the sun.

Leave all fittings finger tight until assembly is complete, for ease of construction. Then tighten firmly.

Children should not wear cycle helmets whilst on this equipment.

Do not allow children to stand on any swing seats, glider seats or slide chutes relevant to your product.

Do not allow the children to jump or climb off any moving equipment.

Do not twist swing ropes or wrap them over the top bar.

Do not allow loose, hooded or baggy clothes to be worn as children can get trapped and may be unable to free themselves.

Do not allow children to climb on parts of this equipment not intended for this purpose.

Do not allow children to wander into the play area whilst the equipment is in use.

Giders and swings must not exceed an angle of 60 degrees from the ground.

Regularly check the item for wear and damage, removing the item from use when necessary until replacement parts are fitted.

Failure to assemble and maintain this item as per instruction may cause injury to the user.

Please keep the instructions in a safe place for future reference.

The minimum clearance between the junior swing seat and ground level should be 350mm,

the baby seat and ground should be 200mm.

Please contact our customer services department if you have any problems.

Do not modify this item.

Conforms to EN71

Made in China to European Standards

SWING PARTS LIST



CENTRE BAR (x1)



GROUND PEG (x4)




"LEFT-HAND" TYPE TOP LEG (x2)



SPANNER (x1)




"RIGHT-HAND" TYPE TOP LEG (x2)

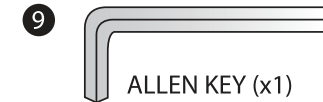

ALLEN KEY (x1)




BOTTOM LEG (x8)

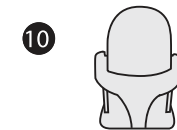


TODDLER SEAT (X1)



SIDE STAY BAR (x2)

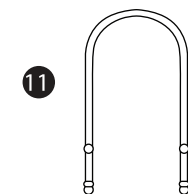

U - BAR (X1)

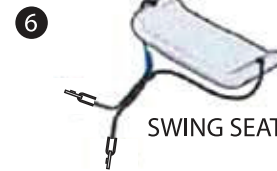

SWING SEAT (x1)


ASSEMBLY INSTRUCTION FOR TODDLER SWING

TODDLER SWING FOR CHILDREN 6 MONTHS TO 36 MONTHS


PLEASE RETAIN UNUSED SWING COMPONENTS FOR ASSEMBLY OF JUNIOR SWING

STEP 1 Frame & Swing Seat Assembly

STEP 1 SEAT ASSEMBLY

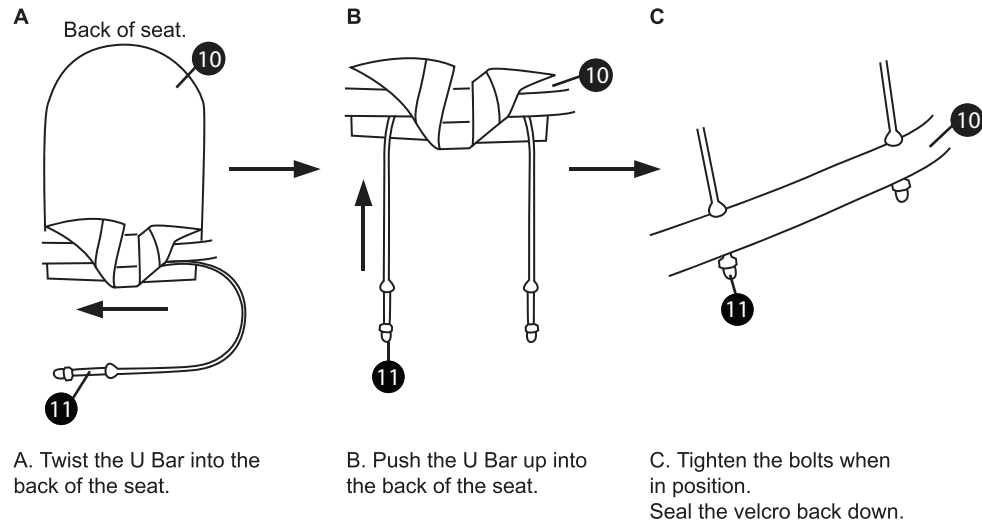



STEP 2 Frame & Swing Assembly

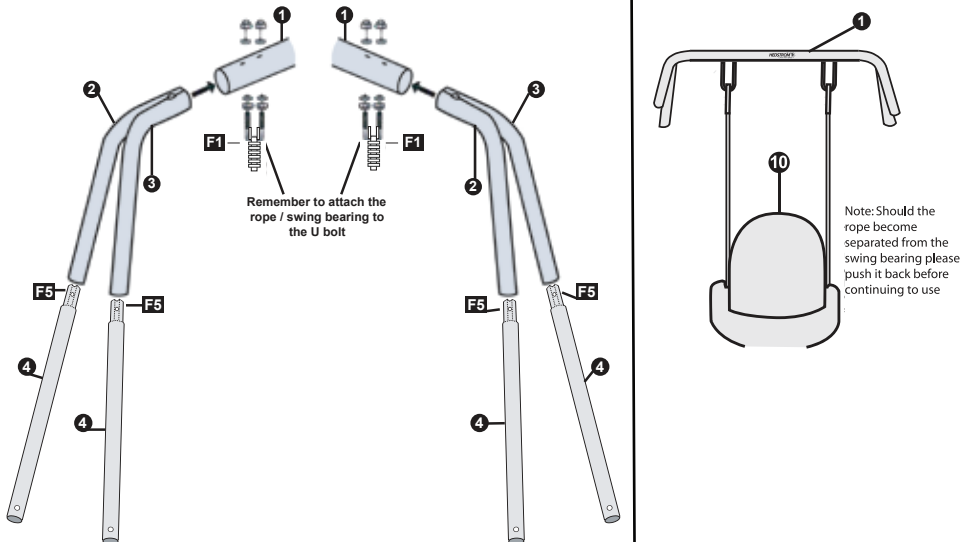

STEP 3 ANCHORING SWING TO GROUND






Take Care When Seating Your Child!
The child must be secured to the seat immediately to avoid any injury.

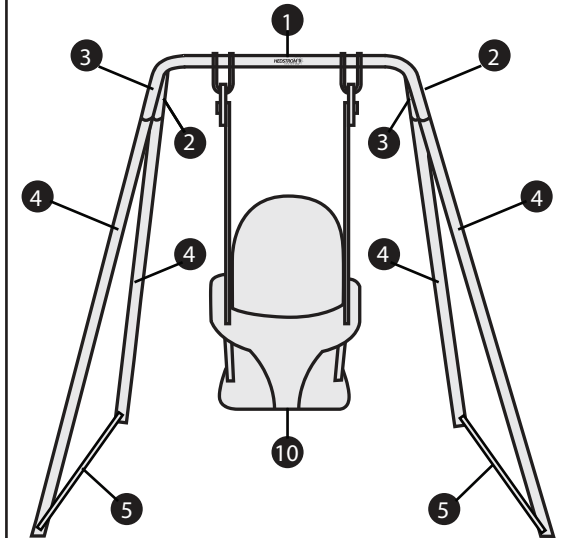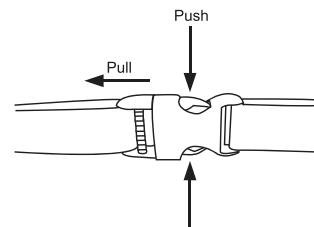

Note: If the soil is hard enough, it may not be necessary to concrete the ground pegs of the baby swing. If the pegs are concreted, additional ground pegs (not provided) will be required for the single swing.

Note: Additional ground pegs can be requested from MV customer services.

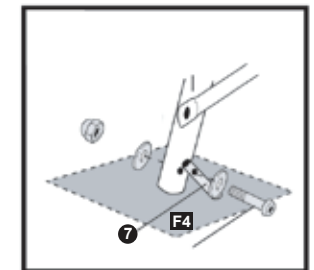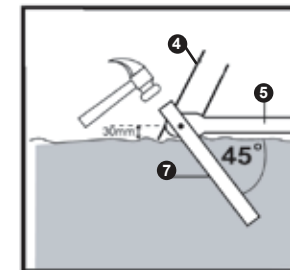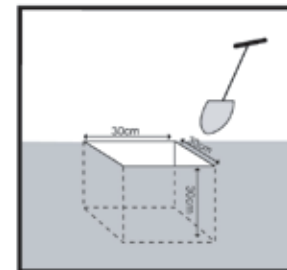

ASSEMBLY INSTRUCTION FOR JUNIOR SWING

JUNIOR SWING: FOR CHILDREN 3 -10 YEARS


STEP 1 Frame & Swing Seat Assembly



M8 U-BOLT (X2)



M6 BOLT 35mm (x4)

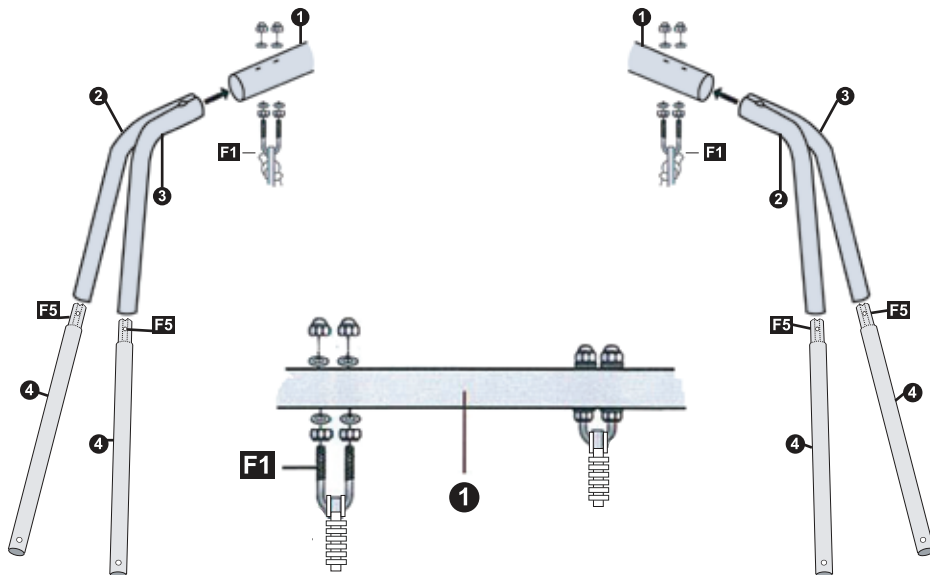

- Remember to attach the rope / swing bearing to the U bolt

STEP 2


Frame & Swing Assembly



M6 BOLT 42mm (x4)






M6 BOLT 52mm (x4)

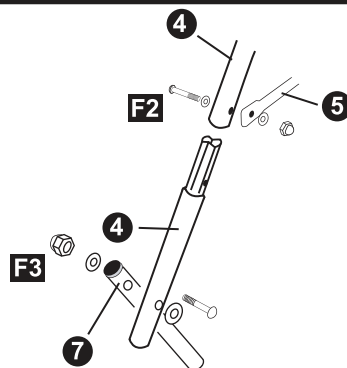


STEP 3

Anchoring the swing to the ground

IMPORTANT: For safety reasons this swing **MUST** be anchored into the ground. We recommend that it is concreted in. If you are uncertain about this procedure, telephone our helpline number.

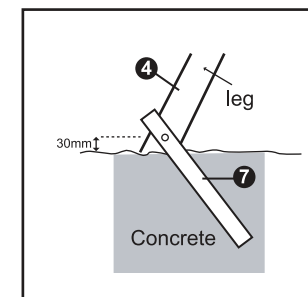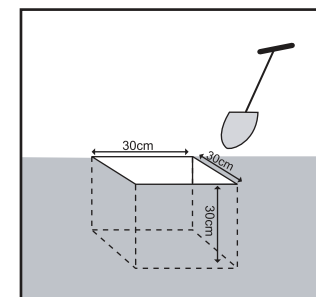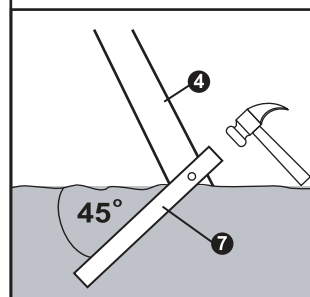

Note: Should the rope become separated from the swing bearing please push it back before continuing to use

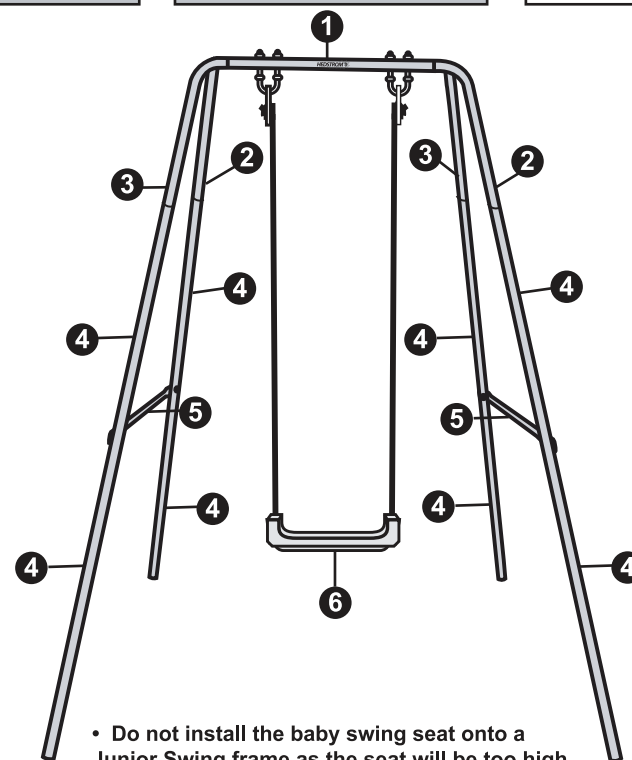

- Do not install the baby swing seat onto a Junior Swing frame as the seat will be too high.

MV Sports & Leisure Ltd.
35 Tameside Drive
Castle Bromwich
Birmingham B35 7AG
United Kingdom

www.mvsports.com

CUSTOMER SERVICES

MV has taken great care to ensure that this item has reached you in good condition. Should you have a query, please contact customer.services@mvsports.com where your query will be dealt with promptly. Alternatively, you can call on 0121 748 8017.



Vulcan Consulting
EU Authorised Representative, The Merriam
Buildings - Iconic offices, 18-20 Merriam
Street, Dublin 2, D02 XH98, Ireland.

This mark denotes compliance with the standards laid down by the E.C. (European Community). It is in your best interest to keep a note of our name and address for future reference. If you have any complaints or find this product to be faulty, in order to avoid any delay, please contact the distributor at the address shown.